

Blue sky Latch C-172

Installation Instructions

Parts List:

(4) 18-8 Stainless Steel 82 Degree Flat Head Phillips Machine Screw, 6-32 Thread, 1/2" Length, MS51959-30

(4) Cadmium-Plated Steel 6-32 nylon insert lock nuts MS-21044-N06

(2) Support Washers



(2) door catches



2 Wing stems 2 4-6 Rivets CR3213-4-6


From this:



To this:



1. Installing the door catch. Drill out the rivets using a 1/8" drill. Remove the old hardware.

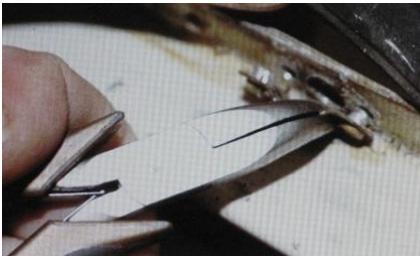

2. Insert support washer into the catch.



3. Using the 6-32X1/2" Phillips Flat Machine screws and nylon lock nuts Install the catch using the same holes of the rivets you drilled out.



4. Remove the old stems from the wing mount base plates using existing hardware.



5. Install the new wing latch. Hold them in place to time the wing, close your door, to check alignment adjust as need. When alignment is correct use, Rivets CR3213-4-6 to secure the correct position Repeat on the other door.
6. Check the latch by opening the door and closing it several times.
7. Note: We have found each model 172 to be slightly different in location and angle. If needed loosen the base mount screws and close the door re tighten the screws.